



Engine Oil & Filter

4. Reinstall the oil filter cover, making sure the bolts are tightened to the specified torque:
9 lbf·ft (12 N·m , 1.2 kgf·m)
5. Pour the drained oil into a suitable container and dispose of it in an approved manner (page 182).

NOTICE

Improper disposal of drained fluids is harmful to the environment.

Add Engine Oil:

1. Check that the drain plug sealing washer is in good condition. If necessary, replace the sealing washer.
2. Reinstall the oil drain plug and tighten it to the specified torque:
18 lbf·ft (25 N·m , 2.5 kgf·m)
3. Fill the crankcase with the recommended grade oil approximately:
3.8 US qt (3.6 ℓ)
4. Reinstall the oil filler cap and dipstick.
5. Start the engine and let it idle for 3–5 minutes.
6. Stop the engine, wait 2–3 minutes and check the oil level. Make sure the oil is between the upper and lower level marks on the dipstick. If necessary, add more oil but do not overfill.
7. Check that there are no oil leaks.
8. Install the left side cover.
9. Install the right side cover.
10. Install the seat.

If a torque wrench is not used for installation, see your Honda dealer as soon as possible to verify proper assembly.