




## Indicators & Displays

Reset the meters after each scheduled maintenance.

To reset the maintenance tripmeter and the maintenance hourmeter, press and hold the mode button and turn the ignition switch to ON ( I ). Continue to hold the mode button, the maintenance minder indicator will light up, and after 2 seconds will flash twice, the maintenance minder indicator is reset.

Also the maintenance tripmeter and maintenance hourmeter will reset.

Maintenance Minder Indicators:

	<p><b>Initial Maintenance</b> Appears at 150 km (100 miles) or 20 operating hours, whichever comes first.</p>
	<p><b>Regular Maintenance Interval 1</b> Appears 1,000 km (600 miles) or 100 operating hours after the Initial Maintenance or Regular Maintenance Interval 2 is performed and maintenance minder is reset, whichever comes first in the maintenance schedule.</p>
	<p><b>Regular Maintenance Interval 2</b> Appears 1,000 km (600 miles) or 100 operating hours after Regular Maintenance Interval 1 is performed and maintenance minder is reset, whichever comes first in the maintenance schedule.</p>

If the maintenance is done before the setting interval, be sure to reset the meters after the maintenance.