



Indicators & Displays

Lamp Check

The high coolant temperature indicator and PGM-FI indicator come on for a few seconds and then go off when you turn the ignition switch ON (I).

TRX420FPM only:

The PS (Electric Power Steering) indicator comes on when you turn the ignition switch ON (I) so you can check that it is working.

The indicator remains on until the engine is started.

The indicators are identified in the table on page 16 with the words:
Lamp Check.

When applicable, the reverse or neutral indicators come on when you turn the ignition switch ON (I) and remain on until you shift out of reverse or neutral.



Except TRX420TM:

When applicable, the 4WD indicator comes on when you turn the ignition switch ON (I) and remains on until you shift out of 4WD mode.

Except TRX420FPM:

If one of these indicators does not come on when it should, have your dealer check for burned-out bulbs or other problems.

TRX420FPM only:

If one of these indicators does not come on when it should, have your dealer check for problems.

