



# Controls & Features

## Ignition Switch


The ignition switch (1) is used for starting and stopping the engine (page 60). Insert the key and turn it to the right for the ON ( I ) position.

TRX420FPM only:

The ignition switch is also used to reset the oil change indicator (page 20 ).

Key Position	Function
ON ( I )	Electrical circuits on.
OFF ( O )	No electrical circuits function.

CENTER OF HANDLEBAR

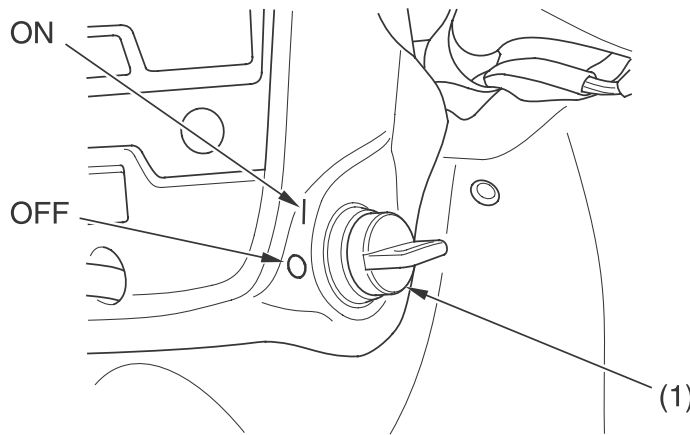

(1) ignition switch

I ON  
 O OFF

