



Basic Operation & Riding

This section gives basic riding instructions, including how to start and stop your engine, and how to use the throttle and brakes. It also provides important information on riding with cargo.

To protect your new engine and enjoy optimum performance and service life, refer to Break-in Guidelines (page 215).

- Safe Riding Precautions55
 - Off-road Use Only55
 - Keep Hands and Feet on Controls.....56
 - Control Speed.....57
 - Use Care on Unfamiliar or Rough Terrain.....58
 - Do Not Perform Stunts.....59
- Starting & Stopping the Engine60
 - Preparation60
 - Starting Procedure61
 - Flooded Engine62
 - Bank Angle Sensor Ignition Cut-off System62
 - Stalled Engine63
 - How to Stop the Engine64
- Shifting Gears65
- Riding in Reverse67



(cont'd)

