



## Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇔	INITIAL MAINT.			REGULAR MAINT. INTERVAL	Refer to page	
			mi	100	600			1200
			km	150	1000			2000
			MONTH	1	6			12
		NOTE	HOURS	20	100	200		
*	FUEL LINE				I		—	
*	THROTTLE OPERATION				I		131	
	AIR CLEANER	NOTE 1			C	C	125	
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2			I	I	130	
	SPARK PLUG				I	I	135	
*	VALVE CLEARANCE				I	I	138	
	ENGINE OIL				INITIAL= 100 mi (150 km), 20 operating hours or 1 month: R REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R		105	
	ENGINE OIL FILTER						110	
*	ENGINE IDLE SPEED				I	I	—	
	RADIATOR COOLANT	NOTE 3			I	I	119	
*	COOLING SYSTEM	NOTE 2			I	I	—	

\* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 224).

