



Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.		REGULAR MAINT. INTERVAL		Refer to page
		⇨	mi	100	600	1200		
			km	150	1000	2000		
			MONTH	1	6	12		
NOTE	HOURS	20	100	200				
	DRIVETRAIN BOOTS							163
	REAR FINAL GEAR CASE OIL AND DIFFERENTIAL OIL (Except TRX420TM)				(R: EVERY 2 YEARS)			114, 117
	REAR FINAL GEAR CASE OIL (TRX420TM only)				(R: EVERY 2 YEARS)			114
*	2WD/4WD SELECT SYSTEM (Except TRX420TM)							—
*	BRAKE FLUID	NOTE 3						143
*	BRAKE SHOES WEAR	NOTE 1,2						151
*	BRAKE PADS WEAR	NOTE 1,2						146
*	BRAKE LIGHT SWITCH							152
	BRAKE SYSTEM							143
*	REVERSE LOCK SYSTEM GUARDS							134
	CLUTCH SYSTEM							161
*	SUSPENSION							133
*	SPARK ARRESTER				C	C		140
*	NUTS, BOLTS, FASTENERS							139
**	WHEELS/TIRES							—
**	TIE-ROD AND JOINT BOOTS							154
**	STEERING SHAFT HOLDER BEARINGS							—
**	STEERING SYSTEM							—

* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 224).

** In the interest of safety, we recommend these items be serviced only by your dealer.

