LIGHTS

Headlight and Dimmer Switches

The headlight and dimmer switches (Fig. 2-12) are above the starter button, next to the gearshift switches.

Turning the headlight switch (1) \Re (ON) turns the headlight and assist headlight on. Use the dimmer switch (2) to select either high beam $\mathbb{E}D$ (HI) or low beam $\mathbb{E}D$ (LO) for the headlights.

The dimmer switch will not change the assist headlight beam.

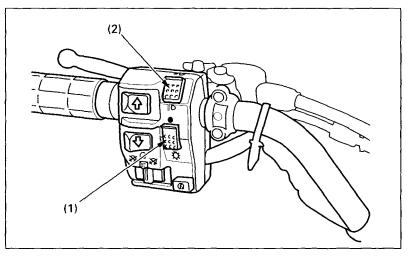


Fig. 2-12

(1) Headlight switch

(2) Dimmer switch