

	FREQUENCY	ITEMS	Whichever comes first ↷	INITIAL	REGULAR		Refer to page	
				MAINTENANCE	MAINTENANCE INTERVAL			
				mi	100	600		1200
				km	150	1000		2000
NOTE	HOURS	20	100	200				
		DRIVE SHAFT BOOTS					—	
		REAR FINAL GEAR CASE OIL AND DIFFERENTIAL OIL			(R: EVERY 2YEARS)		117 – 119	
NON-EMISSION RELATED ITEM	*	BRAKE FLUID	(NOTE3)					134
	*	BRAKE SHOE WEAR	(NOTE1)					139
		BRAKE SYSTEM						131 – 140
	*	REVERSE LOCK SYSTEM						123
		SKID PLATES, ENGINE GUARD						147
	*	CLUTCH SYSTEM						122
	*	SUSPENSION						—
	*	SPARK ARRESTER				C	C	148
	*	NUTS, BOLTS, FASTENERS						—
	**	WHEELS/TIRES						141 – 145
	**	STEERING SHAFT HOLDER BEARINGS						—
	**	STEERING SYSTEM						—

\* SHOULD BE SERVICED BY YOUR AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SERVICE MANUAL.

\*\* IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY YOUR AUTHORIZED HONDA DEALER.

- NOTES:
1. Service more frequently when riding in dusty areas, sand or snow.
  2. Service more frequently after riding in very wet or muddy conditions.
  3. Replace every 2 years. Replacement requires mechanical skill.