

## Digital Clock

When selected, the digital clock (1) (Fig. 2-21) shows the time while the ignition is ON ( I ). To change the display from hourmeter to digital clock, press and release the hourmeter/digital clock select button (2).

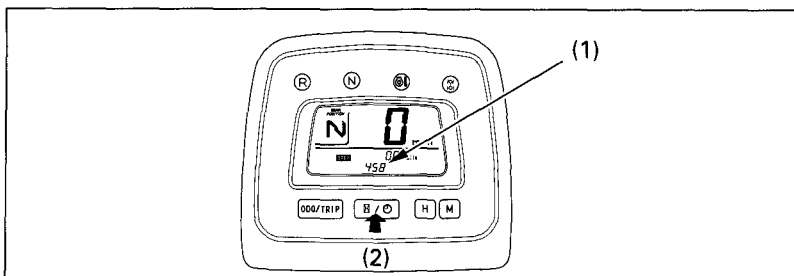


Fig. 2-21 (1) Digital clock (2) Hourmeter/digital clock select button

## Digital Clock Adjustment:

Turn the ignition switch ON ( I ).

To advance the hour display one unit at a time, press and release the hour select button (1).

To advance the hour display automatically, press and hold the hour select button. After two seconds, the hour display will begin advancing. Release the button when the display reaches the desired hour (2).

To advance the minute display one unit at a time, press and release the minute select button (3).

To advance the minute display automatically, press and hold the minute select button. After two seconds, the minute display will begin advancing. Release the button when the display reaches the desired minute (4).

To zero the minute display, press and hold both the hour and minute buttons simultaneously for two seconds.

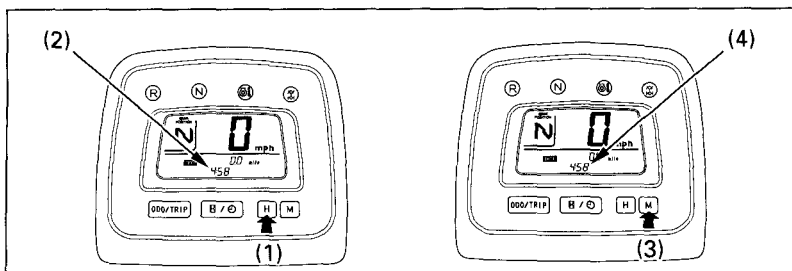


Fig. 2-22 (1) Hour select button  
(2) Hour

(3) Minute select button  
(4) Minute