

### **Flooded Engine**

If the engine does not start after several attempts, it may have become flooded with excess fuel. To clear the engine:

1. Turn the engine stop switch OFF (  $\otimes$  ).
2. Move the choke lever to the OFF position.
3. Hold the throttle fully open and briefly press the starter button or operate the recoil starter several times.
4. When the engine is cleared, wait 10 seconds. Then turn the engine stop switch to RUN (  $\circ$  ) and repeat the normal starting procedure, but don't use the choke.

### **Low Battery**

If the battery is low or dead, use the recoil starter (page 19) to start the engine.

### **High Altitude Adjustment**

**For operation above 3,000 feet (1,000 m), it may be necessary to switch to high altitude carburetor jetting (see page 111).**