

2. Remove the seat (page 146).
3. Remove the fuse box cover (page 127).
4. Pull the old fuse out of the clips.
5. Push a new fuse into the clips and install the fuse box cover.
6. Install the seat.

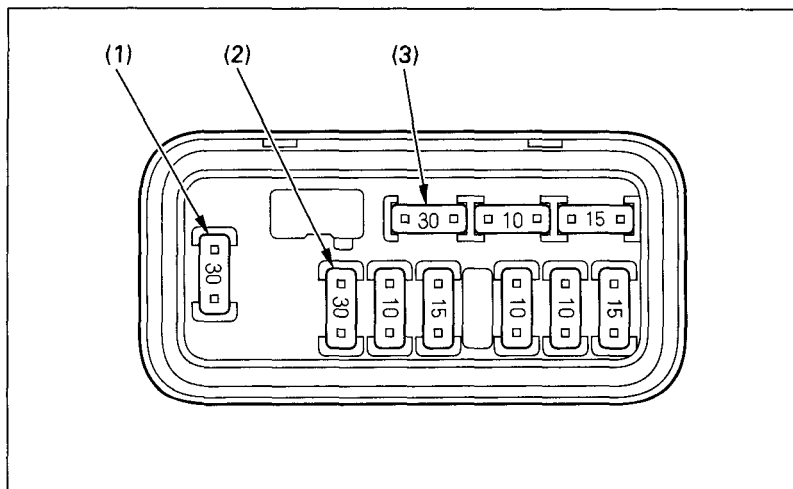


Fig. 4-21 (1) Main fuse

(2) Control motor fuse
(3) Spare main fuse

To replace the sub fuses:

1. Make sure the ignition switch is OFF (○).

CAUTION:

Turn the ignition switch OFF (○) before checking or replacing the fuse to prevent accidental short-circuiting which could damage the electrical system.