

# Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒ NOTE	INITIAL MAINT.		REGULAR MAINT. INTERVAL		Refer to page
			mi	100	600	1200	
			km	150	1000	2000	
			HOURS	20	100	200	
EMISSION RELATED ITEMS	* FUEL LINE					I	-
	* THROTTLE OPERATION					I	120
	* CARBURETOR CHOKE					I	122
	AIR CLEANER	NOTE 1			C	C	115
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2			I	I	119
	SPARK PLUG				I	I	126
	* VALVE CLEARANCE			I	I	I	129
	ENGINE OIL			R	R	R	104
	ENGINE OIL FILTER			R	R	R	108
	* ENGINE IDLE SPEED			I	I	I	125

\* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 210 ).