

## MAINTENANCE SCHEDULE

	FREQUENCY ITEMS	Whichever comes first ↷	INITIAL		REGULAR		Refer to page
			MAINTENANCE	MAINTENANCE INTERVAL	MAINTENANCE INTERVAL	MAINTENANCE INTERVAL	
			mi	100	600	1200	
			km	150	1000	2000	
		NOTE	HOURS	20	100	200	
EMISSION RELATED ITEMS	* FUEL LINE					I	—
	* THROTTLE OPERATION					I	98
	* CARBURETOR CHOKE					I	103
	AIR CLEANER	(NOTE 1)			C	C	99—101
	AIR CLEANER HOUSING DRAIN TUBE	(NOTE 2)			I	I	102
	SPARK PLUG				I	I	114—115
	* VALVE CLEARANCE			I	I	I	115
	ENGINE OIL			R	R	R	37, 106—110
	ENGINE OIL FILTER			R	R	R	108—110
	* ENGINE IDLE SPEED			I	I	I	104

I: Inspect and Clean, Adjust,  
Lubricate or Replace if necessary.

C: Clean R: Replace

A: Adjust L: Lubricate