

	FREQUENCY ITEMS	Which ever comes first ↻	INITIAL		REGULAR		Refer to page
			MAINTENANCE		MAINTENANCE INTERVAL		
			mi	100	600	1200	
			km	150	1000	2000	
	NOTE	HOURS	20	100	200		
NON EMISSION RELATED ITEMS	DRIVE SHAFT BOOTS					—	
	REAR FINAL GEAR CASE OIL AND DIFFERENTIAL OIL			(R: EVERY 2 YEARS)		111 – 113	
	* BRAKE FLUID	(NOTE 3)				128	
	* BRAKE SHOE WEAR	(NOTE 1)				133	
	BRAKE SYSTEM					125 – 134	
	* REVERSE LOCK SYSTEM					117	
	SKID PLATES, ENGINE GUARD					141	
	* CLUTCH SYSTEM					116	
	* SUSPENSION					—	
	* SPARK ARRESTER				C	C	142
	* NUTS, BOLTS, FASTENERS					—	
	** WHEELS/TIRES					135 – 139	
	** STEERING SHAFT HOLDER BEARINGS					—	
** STEERING SYSTEM					—		

\* Should be serviced by your authorized Honda dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda service manual.

\*\* In the interest of safety, we recommend these items be serviced only by your authorized Honda dealer.

- NOTES:
1. Service more frequently when riding in dusty areas, sand or snow.
  2. Service more frequently after riding in very wet or muddy conditions.
  3. Replace every 2 years. Replacement requires mechanical skill.