


WIRING DIAGRAM

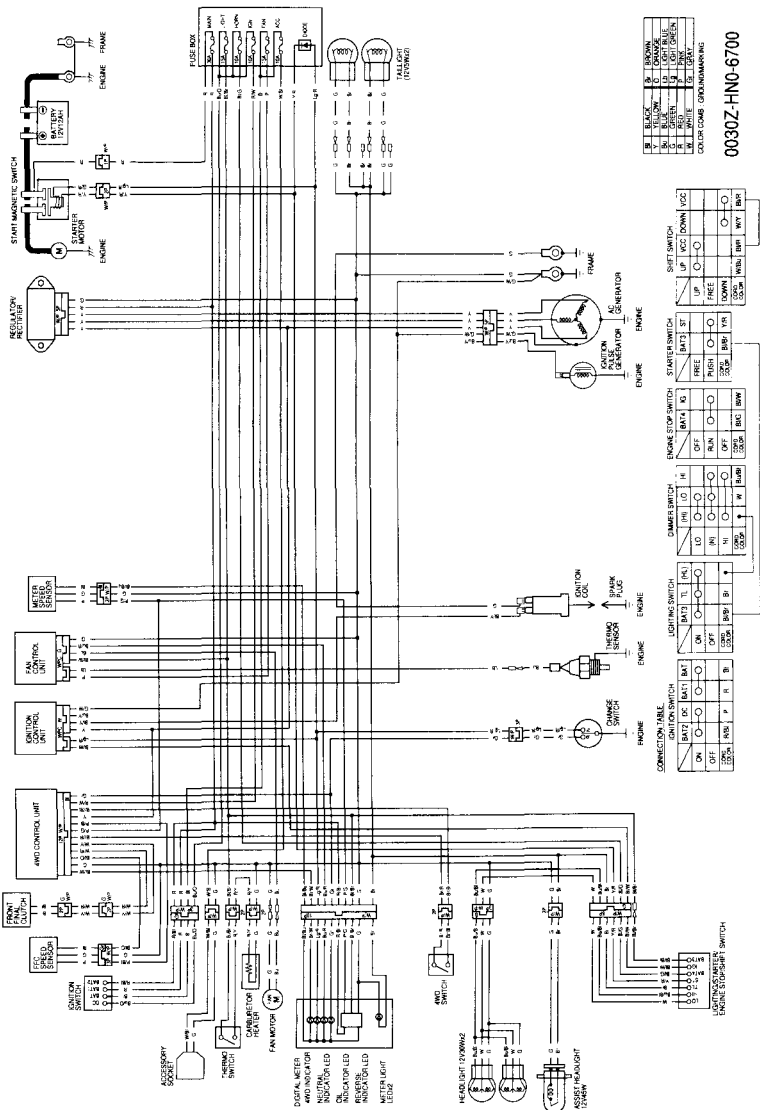

CONNECTION TABLE

IGNITION SWITCH	BAT1	DC	BAT1	B
OFF	OFF	OFF	OFF	OFF
ON	ON	ON	ON	ON
LOCK	LOCK	LOCK	LOCK	LOCK

CHARGE SWITCH	BAT1	DC	BAT1	B
OFF	OFF	OFF	OFF	OFF
ON	ON	ON	ON	ON
LOCK	LOCK	LOCK	LOCK	LOCK

LIGHTING SWITCH	BAT1	DC	BAT1	B
OFF	OFF	OFF	OFF	OFF
ON	ON	ON	ON	ON
LOCK	LOCK	LOCK	LOCK	LOCK

CHAMBER SWITCH	PH	LO	H
LO	LO	LO	LO
PH	PH	PH	PH
H	H	H	H

ENGINE STOP SWITCH	BAT1	DC	BAT1	B
OFF	OFF	OFF	OFF	OFF
ON	ON	ON	ON	ON
LOCK	LOCK	LOCK	LOCK	LOCK

STARTER SWITCH	BAT1	DC	BAT1	B
FREE	FREE	FREE	FREE	FREE
PUSH	PUSH	PUSH	PUSH	PUSH
LOCK	LOCK	LOCK	LOCK	LOCK

SHIFT SWITCH	UP	WCD	DOWN	UCC
UP	UP	UP	UP	UP
WCD	WCD	WCD	WCD	WCD
DOWN	DOWN	DOWN	DOWN	DOWN
UCC	UCC	UCC	UCC	UCC