


Indicators & Display

Odometer


When selected, the odometer (1) registers total distance traveled in miles while the ignition is ON (1). To change the display from tripmeter to odometer, press and release the Odometer/Tripmeter select button (2).

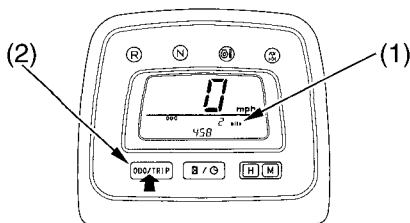

(1) odometer (2) odometer/tripmeter select button

Tripmeter

When selected, the tripmeter (3) shows mileage per trip while the ignition is ON (1). To change the display from odometer to tripmeter, press and release the Odometer/Tripmeter select button (2). To reset the tripmeter to zero, press the Odometer/Tripmeter select button and hold it for at least two seconds.

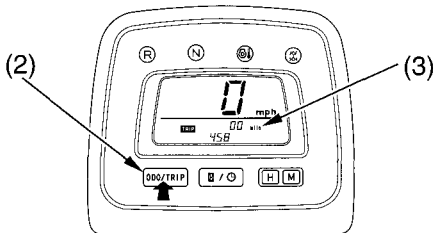

(3) tripmeter