

Is Your ATV Ready to Ride?

- Fuel* Check the level and add fuel (page 84) if needed. Also make sure the fuel fill cap is securely fastened.
Check for leaks.
- Tires* Use a gauge to check the air pressure. Adjust if needed. Also look for signs of damage or excessive wear (page 141).
- Drive Chain* Check the condition and slack. Adjust and lubricate if needed.
- Nuts & Bolts* Check the wheels to see that the axle nuts are tightened. Use a wrench to make sure all accessible nuts, bolts, and fasteners are tight.
- Underbody & Exhaust System* Check for, and remove, any dirt, vegetation or other debris that could be a fire hazard or interfere with the proper operation of the vehicle.
- Leaks, Loose Parts* Walk around your ATV and look for anything that appears unusual, such as a leak or loose cable.
- Cable* Check the cable housings for wear. Check the fittings for looseness. Replace or tighten as needed.
- Lights* Make sure the headlight, brake light and tail light are working properly.