

# Drive Chain

## Adjustment


Refer to *Safety Precautions* on page 71.

1. To adjust slack, use an Allen wrench (1) to loosen the rear axle holder fixing bolts (2).
2. Turn the adjuster (3) to decrease (A) or increase (B) chain slack.
3. Retighten the rear axle holder fixing bolts.

Rear axle holder fixing bolts torque:  
15 lbf-ft (21 N·m , 2.1 kgf·m)

If a torque wrench is not used for installation, see your Honda dealer as soon as possible to verify proper assembly.

REAR

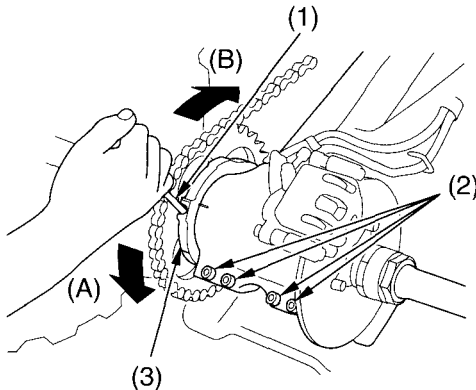

(1) Allen wrench  
(2) fixing bolts

(3) adjuster