

Is Your ATV Ready to Ride?

Check these items after you get on the ATV:

- | | |
|--|---|
| <i>Throttle</i> | Check the freeplay and adjust if needed. Press the throttle to make sure it moves smoothly without sticking, and snaps shut automatically when it is released, in all steering positions (page 108). |
| <i>Brakes</i> | Squeeze the front brake lever and step on the rear brake pedal to check that the controls operate normally. Make sure there is no brake fluid leakage (page 128). |
| <i>Clutch Lever</i> | Check for smooth operation and adjust if needed (page 110). |
| <i>Headlight and Headlight Dimmer Switch</i> | Check for proper function (page 20). |
| <i>Engine Stop Switch</i> | Check for proper function (page 19). |
| <i>Steering</i> | Check that the wheels turn properly as you steer the handlebar. |

Remember, be sure to take care of any problem you find, or have your Honda dealer correct it before you ride.