

Basic Operation & Riding

This section gives basic riding instructions, including how to start and stop your engine, how to use the throttle and brakes, and what to do when you're through riding.

To protect your new engine and enjoy optimum performance and service life, refer to Break-in Guidelines (page 189).

For information about carburetor adjustment for riding at high altitude, see page 190.

| | |
|--|----|
| Safe Riding Precautions..... | 40 |
| Off-Road Use Only..... | 40 |
| Keep Hands and Feet on Controls..... | 41 |
| Control Speed..... | 42 |
| Use Care on Unfamiliar or Rough Terrain..... | 43 |
| Do Not Perform Stunts..... | 44 |
| Starting & Stopping the Engine | 45 |
| Preparation | 45 |
| Starting Procedure | 46 |
| How to Stop the Engine | 48 |
| Shifting Gears | 49 |
| Braking..... | 51 |
| Riding Your ATV | 53 |
| Making Turns..... | 53 |
| Skidding or Sliding | 55 |
| Riding Up Hills | 56 |
| Riding Down Hills | 60 |
| Crossing or Turning on Hills or Slopes..... | 61 |
| Riding Over Obstacles | 63 |
| Riding Through Water | 64 |
| Parking | 65 |