

Maintenance Schedule

ITEMS		FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
			mi	km	100	600	1200	
			↔	km	150	1000	2000	
			NOTE	HOURS	20	100	200	
NON EMISSION RELATED ITEMS		DRIVE CHAIN	NOTE 1,2		I,L	I,L EVERY 300mi (500km) or 50 operating hours		145
		DRIVE CHAIN SLIDER						147
	*	BRAKE FLUID	NOTE 3					127
	*	BRAKE PAD WEAR	NOTE 1,2					131
	*	BRAKE LIGHT SWITCH						134
		BRAKE SYSTEM						127
		SKID PLATES, ENGINE GUARD						144
	*	CLUTCH SYSTEM						110
	*	SUSPENSION						121
	*	SPARK ARRESTER				C	C	119
	*	NUTS, BOLTS, FASTENERS						-
	**	WHEELS/TIRES						-
	**	STEERING HEAD BEARINGS						-
	**	STEERING SHAFT HOLDER BEARINGS						-
**	STEERING SYSTEM						-	

- * Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 198).
- ** In the interest of safety, we recommend these items be serviced only by your Honda dealer.