
## **Starting & Stopping the Engine**

## Preparation

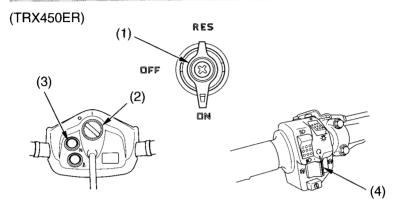

- (1) fuel valve
- (2) ignition switch
- (3) neutral indicator
- (4) engine stop switch
- 1. Before starting, select a level surface and lock the parking brake (page 25).
- 2. Turn the fuel valve (1) and ignition switch (2) to ON (1).

## Confirm the following:

- The transmission is in neutral (neutral indicator (3) ON).
- The engine stop switch (4) is set to RUN ( () ).

The high coolant temperature indicator should go off a few seconds after the ignition switch to ON ( | ).