

Odometer/Tripmeter

Odometer

When selected, the odometer (1) (Fig. 2-16) registers total distance traveled in miles while the ignition is I (ON). To change the display (2) from tripmeter to odometer, press and release the Odometer/Tripmeter select button (3).

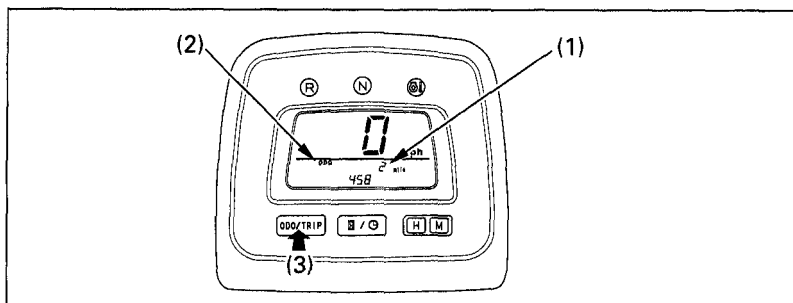


Fig. 2-16 (1) Odometer (2) "ODO" display (3) Odometer/Tripmeter select button

Tripmeter

When selected, the tripmeter (1) (Fig. 2-17) shows mileage per trip while the ignition is I (ON). To change the display (2) from odometer to tripmeter, press and release the Odometer/Tripmeter select button (3). To reset the tripmeter to zero, press the Odometer/Tripmeter select button and hold it in for at least two second.

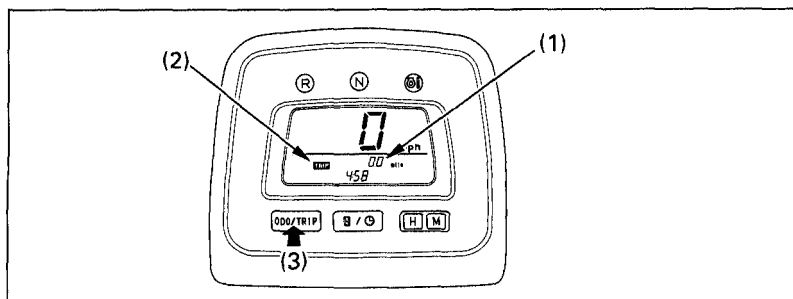


Fig. 2-17 (1) Tripmeter (2) "TRIP" display (3) Odometer/Tripmeter select button