

## MAINTENANCE SCHEDULE

		FREQUENCY ITEMS	Whichever comes first ↷ NOTE	INITIAL		REGULAR		Refer to page
				MAINTENANCE		MAINTENANCE INTERVAL		
				mi	100	600	1200	
				km	150	1000	2000	
		HOURS	20	100	200			
EMISSION RELATED ITEMS	*	FUEL LINE					I	—
	*	THROTTLE OPERATION					I	98
	*	CARBURETOR CHOKE					I	103
		AIR CLEANER	(NOTE 1)			C	C	99 – 101
		AIR CLEANER HOUSING DRAIN TUBE	(NOTE 2)			I	I	102
		SPARK PLUG				I	I	114 – 115
	*	VALVE CLEARANCE			I	I	I	115
		ENGINE OIL			R	R	R	35, 106 – 110
		ENGINE OIL FILTER			R	R	R	106 – 110
	*	ENGINE IDLE SPEED			I	I	I	104

I: Inspect and Clean, Adjust,  
Lubricate or Replace if necessary.

C: Clean R: Replace

A: Adjust L: Lubricate