

	FREQUENCY ITEMS	Whichever comes first ➔	INITIAL	REGULAR		Refer to page	
			MAINTENANCE	MAINTENANCE INTERVAL			
			mi	600	1200		
			km	1000	2000		
NOTE	HOURS	20	100	200			
NON EMISSION RELATED ITEMS	DRIVE SHAFT BOOTS					—	
	REAR FINAL GEAR CASE OIL AND DIFFERENTIAL OIL			(R: EVERY 2YEARS)		111—113	
	* BRAKE FLUID	(NOTE3)				128	
	* BRAKE SHOE WEAR	(NOTE1)				133	
	BRAKE SYSTEM					125—134	
	* REVERSE LOCK SYSTEM					117	
	SKID PLATES, ENGINE GUARD					141	
	* CLUTCH SYSTEM					116	
	* SUSPENSION					—	
	* SPARK ARRESTER				C	C	142
	* NUTS, BOLTS, FASTENERS					—	
	** WHEELS/TIRES					135—139	
	** STEERING SHAFT HOLDER BEARINGS					—	
	** STEERING SYSTEM					—	

* SHOULD BE SERVICED BY YOUR AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SERVICE MANUAL.

** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY YOUR AUTHORIZED HONDA DEALER.

- NOTES: 1. Service more frequently when riding in dusty areas, sand or snow.
 2. Service more frequently after riding in very wet or muddy conditions.
 3. Replace every 2 years. Replacement requires mechanical skill.