

Indicators & Displays


Fuel Gauge

The fuel gauge liquid crystal display (1) shows the approximate fuel supply available. The fuel tank capacity is:


15.8 ℓ (4.17 US gal , 3.48 Imp gal)

When segment RES (2) flashes, you should refill the tank as soon as possible. The amount of fuel remaining when the flashing starts is approximately:

3.3 ℓ (0.87 US gal , 0.73 Imp gal)

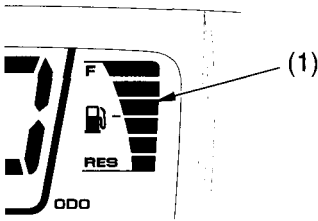

(1) fuel gauge

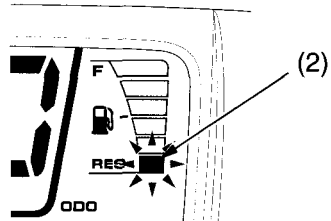

(2) segment RES

All segments will flash, when the fuel gauge function is fails. See your Honda dealer.

