


If a Fuse Blows

Circuit Fuse Access

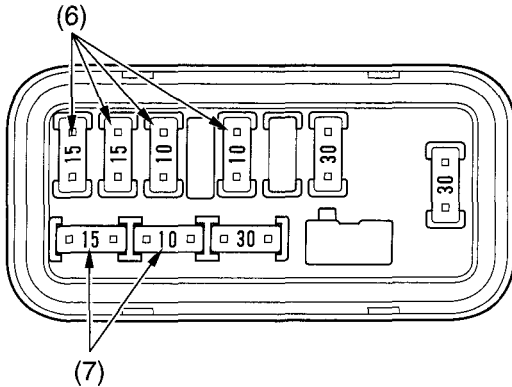

(6) sub fuses

(7) spare fuses

1. To check or replace a circuit fuse (6), pull the old fuse out of its retaining clips.
If the fuse is blown, replace it with a spare fuse (7) of the same rating or lower.
2. Install the fuse box cover.
3. Install the rear fender lid.
4. Install the seat.

If you do not have a replacement fuse with the proper rating for the circuit, install one with a lower rating.

NOTICE

Replacing a fuse with one that has a higher rating greatly increases the chance of damage to the electrical system.