Maintenance Schedule

		WHICHEVER		INITIAL	REGULAR		
FREQUENCY		COMES		MAINT.	MAINT, INTERVAL		ı
		FIRST	mi	100	600	1200	Refer to
ITEMS		⇔	km	150	1000	2000	page
		NOTE	HOURS	20	100	200	
	DRIVE SHAFT BOOTS					!	201
	REAR FINAL GEAR				(R:EVERY	- 1	155
	CASE OIL AND				2 YEARS)		157
	DIFFERENTIAL OIL						
*	BRAKE FLUID	NOTE 3			1		182
*	BRAKE SHOE WEAR	NOTE 1					190
*	BRAKE PADS WEAR	(NOTE 1, 2)					185
*	BRAKE LIGHT SWITCH						191
	BRAKE SYSTEM						182
	SKID PLATES, ENGINE					1	200
	GUARD						
*	SUSPENSION						179
*	SPARK ARRESTER				С	C	177
*	NUTS, BOLTS,	{			}		-
	FASTENERS						ļ
**	WHEELS/TIRES				<u> </u>		
**	STEERING SHAFT						_
l	HOLDER BEARINGS	L	L				
**	STEERING SYSTEM			<u> </u>			

^{*} Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 260).

^{**} In the interest of safety, we recommend these items be serviced only by your Honda dealer.