



# Indicators & Displays


## Display Check

When the ignition switch is turned ON ( I ), the multi-function display ( 1 ) will temporarily show all the modes and digital segments so you can make sure the liquid crystal display is functioning properly.


The displays are identified in the table on page 19 with the words: *Display Check*.

If any part of these displays does not come on when it should, have your Honda dealer check for problems.


TRX500FA

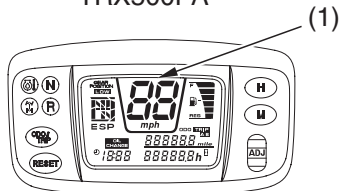

TRX500FGA

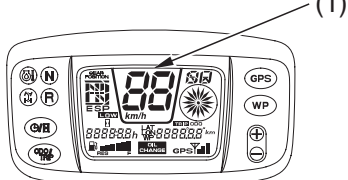

TRX500FPA

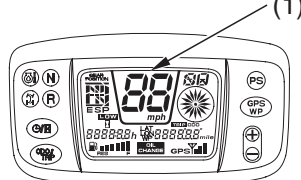

(1) multi-function display