



0 8 / 0 3 / 1 8 1 8 : 2 1 : 4 5 3 1 H N 2 6 8 0 0 0 3 1



Indicators & Displays

Drive Mode Indicator


The drive mode indicator (1) shows the selected drive mode when the ignition switch is in the ON (I) position.

The indicator shows: LOW and ESP (page 118).

LOW indicator will be displayed when the shift lever is in low (L) in the ESP mode.

TRX500FA

TRX500FGA/FPA

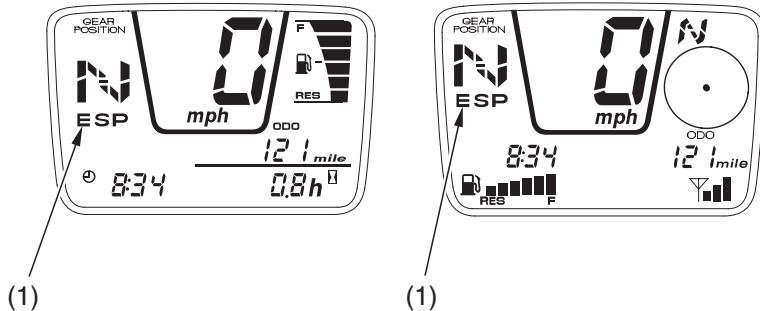

(1) drive mode indicator