

Indicators & Displays


Oil Change Indicator

The oil change indicator (1) appears in the display when the mileage or operating hours on your ATV approaches the oil change interval specified on the maintenance schedule.

Reset the indicator after each oil change.

(For TRX500FA)

To reset the indicator, press and hold both the odometer/tripmeter select button (2) and RESET button (3) for more than 2 seconds. The indicator will disappear.

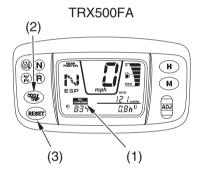

- (1) oil change indicator
- (2) odometer/tripmeter select button
- (3) RESET button (TRX500FA)

24 Instruments & Controls

