 
Indicators & Displays


Fuel Gauge

The fuel gauge liquid crystal display (1) shows the approximate fuel supply available. The fuel tank capacity is:

```
3.96 US gal (15.0 l)
```

When segment RES (2) flashes, you should refill the tank as soon as possible. The amount of fuel remaining when the flashing starts is approximately:



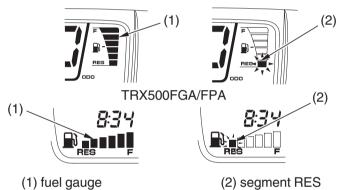

All segments will flash, when the fuel gauge function is fails. See your Honda dealer.

TRX500FA



32 Instruments & Controls

TRX500FGA/FPA

