




GPS Mode

(For TRX500FPA)

1. Turn the ignition switch ON (I).
2. Use the GPS/WP button (1) to select the GPS mode (page 66).
3. To select a higher waypoint number (2), press and release the plus button (3).
To select a lower waypoint number, press and release the minus button (4).
To fast scroll, press and hold the plus or minus button until the desired waypoint number appears.
4. Press and hold the GPS/WP button for about 2 seconds, until the waypoint number and waypoint distance (5) flash. Then release the button.

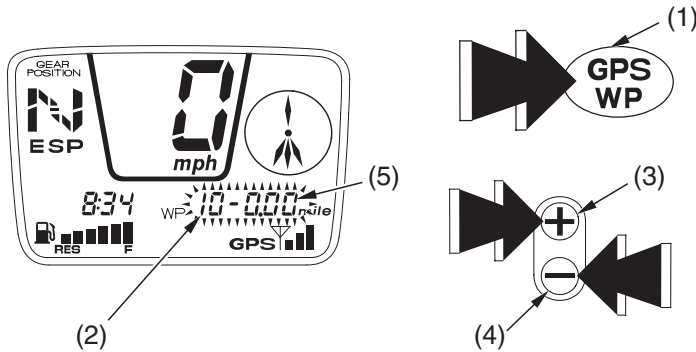

- | | |
|---------------------|-----------------------|
| (1) GPS/WP button | (4) minus button |
| (2) waypoint number | (5) waypoint distance |
| (3) plus button | |

