




GPS Mode

1. Turn the ignition switch ON (1).
2. Use the GPS button to select the GPS mode (page 65).
3. To select a higher waypoint number (1), press and release the plus button (2).
To select a lower waypoint number, press and release the minus button (3).
To fast scroll, press and hold the plus or minus button until the desired waypoint number appears.
4. Press and hold the WP button (4) for about 2 seconds, until the waypoint number and waypoint distance (5) flash. Then release the button.
5. While the display is still blinking, press and hold the WP button again for about 2 seconds until LAT appears above the WP mark. The compass direction indicator will flash Northern Latitude (6) or Southern Latitude (7), indicating the hemisphere. (To switch to the other hemisphere, press either the plus or minus button.)
6. Tap (do not hold) the WP button. The degree (8) will begin flashing.

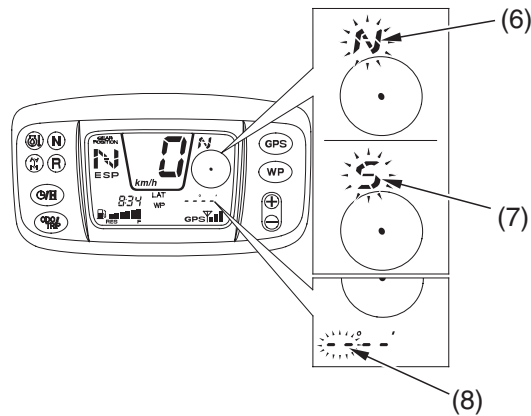

(6) Northern Latitude
(7) Southern Latitude

(8) degree

(cont'd)

