


## **Compass Direction Indicator**

If the receiver loses a position fix (because of a large obstacle nearby or overhead), the compass direction indicator will disappear as shown in the illustration and the antenna mark (2) will flash.

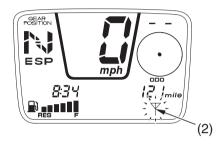

## (2) antenna mark

If the receiver reacquires a position fix, the compass direction indicator will appear as shown in the illustration.

