



Basic Operation & Riding

This section gives basic riding instructions, including how to start and stop your engine, and how to use the throttle and brakes. It also provides important information on riding with cargo.

To protect your new engine and enjoy optimum performance and service life, refer to Break-in Guidelines (page 268).

For information about carburetor adjustment for riding at high altitude, see page 269 .

Safe Riding Precautions	107
Off-road Use Only	107
Keep Hands and Feet on Controls.....	108
Control Speed.....	109
Use Care on Unfamiliar or Rough Terrain.....	110
Do Not Perform Stunts.....	111
Starting & Stopping the Engine	112
Preparation	112
Starting Procedure.....	113
Flooded Engine	115
Stalled Engine	115
How to Stop the Engine	116
Using the Recoil Starter	117
Shifting Gears	118
Riding in Reverse.....	125

(cont'd)

