



Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒ NOTE	INITIAL MAINT.		REGULAR MAINT. INTERVAL		Refer to page
			mi	100	600	1200	
			km	150	1000	2000	
			HOURS	20	100	200	
DRIVESHAFT BOOTS					I	I	217
REAR FINAL GEAR CASE OIL AND DIFFERENTIAL OIL					(R:EVERY 2 YEARS)	I	171, 173
* BRAKE FLUID		NOTE 3			I	I	198
* BRAKE SHOES WEAR		NOTE 1				I	206
* BRAKE PADS WEAR		NOTE 1, 2				I	201
* BRAKELIGHT SWITCH				I	I	I	207
BRAKE SYSTEM				I	I	I	198
SKID PLATES, ENGINE GUARD					I	I	216
* SUSPENSION					I	I	195
* SPARK ARRESTER					C	C	193
* NUTS, BOLTS, FASTENERS				I		I	—
** WHEELS/TIRES				I	I	I	209
** TIE-ROD AND JOINT BOOTS				I	I	I	—
** STEERING SHAFT HOLDER BEARINGS						I	—
** STEERING SYSTEM						I	—

- * Should be serviced by your Honda dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 278).
- ** In the interest of safety, we recommend these items be serviced only by your Honda dealer.