





If a Fuse Blows

Main and Shift Motor Fuse Access

1. To prevent an accidental short circuit, turn the ignition switch OFF (O) before checking or replacing the fuses.
2. Remove the seat (page 158).
3. To access the main fuse (2) and shift motor fuse (3), remove the fuse box cover (4).

UNDER SEAT

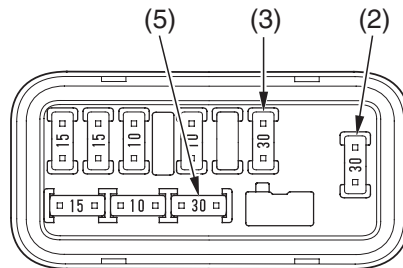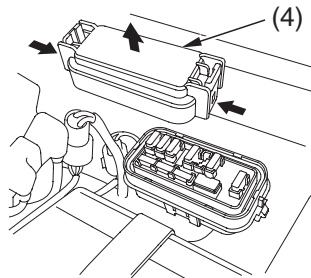

- | | |
|----------------------|---------------------|
| (2) main fuse | (4) fuse box cover |
| (3) shift motor fuse | (5) spare main fuse |

4. Pull the main fuse out.
If it is blown, install the spare main fuse (5).

(cont'd)

