

Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
		⇨	mi	100	600	1200	
			km	150	1000	2000	
		NOTE	HOURS	20	100	200	
DRIVESHAFT BOOTS							165
REAR FINAL GEAR CASE OIL AND DIFFERENTIAL OIL				(R: EVERY 2 YEARS)			123, 125
* BRAKE FLUID		NOTE 3					145
* BRAKE SHOES WEAR		NOTE 1					153
* BRAKE PADS WEAR		NOTE 1, 2					148
* BRAKELIGHT SWITCH							154
BRAKE SYSTEM							145
* REVERSE LOCK SYSTEM							137
SKID PLATES, ENGINE GUARD							164
* CLUTCH SYSTEM							136
* SUSPENSION							—
* SPARK ARRESTER					C	C	143
* NUTS, BOLTS, FASTENERS							—
** WHEELS/TIRES							156
** STEERING SHAFT HOLDER BEARINGS							—
** STEERING SYSTEM							—

* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 224).

** In the interest of safety, we recommend these items be serviced only by your Honda dealer.