



## Indicators & Displays

---

### Digital Clock

Shows hour and minute while the ignition is ON ( I ).

To adjust the time, proceed as follows:

1. Turn the ignition switch ON ( I ).
2. TRX500FE:  
To put the clock in the adjust mode with the hour and minute display flashing, press and hold the adjust button ( 1 ) for more than 2 seconds.  
TRX500FPE:  
To select the adjust mode, push the adjust button ( 1 ) once.
3. To advance the hour display one unit at a time, press and release the hour select button ( 2 ).  
To advance the hour display automatically, press and hold the hour select button. After 2 seconds, the hour display will begin advancing. Release the button when the display reaches the desired hour.
4. To advance the minute display one unit at a time, press and release the minute select button ( 3 ).  
To advance the minute display automatically, press and hold the minute select button. After 2 seconds, the minute display will begin advancing. Release the button when the display reaches the desired minute.
5. To zero the minute display, press and hold both the hour and minute select buttons simultaneously for 2 seconds.
6. TRX500FE:  
Press and hold the adjust button for more than 2 seconds when the display reaches the desired minute. The display will stop flashing.  
TRX500FPE:  
Press the adjust button when the display reaches the desired minute. The display will stop flashing.

