


Engine Oil & Filter

- 4. Remove the oil filler cap/dipstick (2) from the rear crankcase and wipe it clean.
- 5. Insert the oil filler cap/dipstick without screwing it in, then remove the oil filler cap/dipstick and check the oil level. The oil level should be between the upper level mark (3) and the lower level mark (4) on the oil filler cap/dipstick.
- 6. If required, add the specified oil into the filler cap hole, up to the upper level mark on the oil filler cap/dipstick. Do not overfill.
- 7. Reinstall the oil filler cap/dipstick.
- 8. Install the left engine sub cover.

NOTICE

Running the engine with an improper oil level can cause serious engine damage.

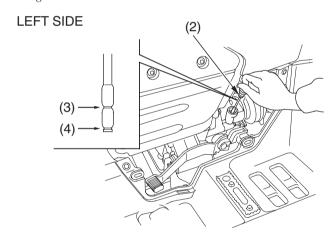

- (2) oil filler cap/dipstick
- (3) upper level mark
- (4) lower level mark

114 Servicing Your Honda

