



# Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
		⇨	mi	100	600	1200	
			km	150	1000	2000	
		MONTH	1	6	12		
NOTE	HOURS	20	100	200			
*	FUEL LINE				I		—
*	THROTTLE OPERATION				I		129
*	CARBURETOR CHOKE				I		131
	AIR CLEANER	NOTE 1			C	C	123
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2			I	I	128
	SPARK PLUG				I	I	135
*	VALVE CLEARANCE			I	I	I	138
	ENGINE OIL			INITIAL= 100 mi (150 km), 20 operating hours or 1 month: R			110
	ENGINE OIL FILTER			REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R			115
*	ENGINE IDLE SPEED			I	I	I	134

\* Should be serviced by your Honda dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 218).

