

# Engine Oil & Filter


## Checking & Adding Oil

Refer to *Safety Precautions* on page 81 .

Check the engine oil level each day before operating your ATV and add if needed.

1. Park your ATV on a firm, level surface.
2. Start the engine in a well-ventilated area and let it idle for 3–5 minutes. Stop the engine and wait 2–3 minutes.
3. Unsnap and remove the left engine sub cover ( 1 ).

LEFT SIDE

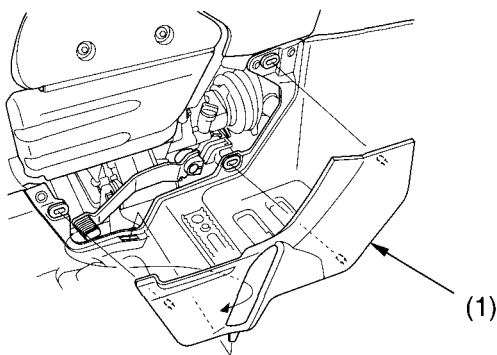

(1) left engine sub cover

(cont'd)