

Engine Oil & Filter

Changing Engine Oil & Filter

Refer to *Safety Precautions* on page 81 .

Your ATV's oil filter has very specific performance requirements. Use a new genuine Honda oil filter specified for your model or a filter of equal quality.

NOTICE


Using the wrong oil filter may result in leaks or premature engine damage.

This procedure requires mechanical skill and professional tools such as a torque wrench and oil filter wrench, as well as a means for disposing of the drained fluid (page 162). If you do not have the skills or the tools, see your Honda dealer.

Drain the Engine Oil:

1. With the ATV on the level ground, remove the left engine sub cover (page 99) and the oil filler cap/dipstick from the rear crankcase.
2. Place an oil drain pan under the crankcase and remove the oil drain plug (1).

UNDER ENGINE

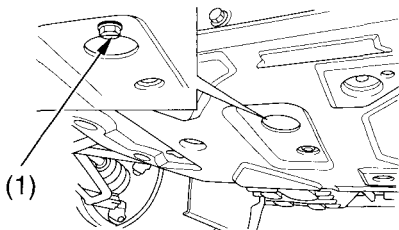

(1) oil drain plug