



## Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒ NOTE	INITIAL MAINT.			REGULAR MAINT. INTERVAL		Refer to page
			km	150	1000	2000	—	
			mi	100	600	1200		
			HOURS	20	100	200		
DRIVE SHAFT BOOTS				I	I	160		
REAR FINAL GEAR CASE OIL AND DIFFERENTIAL OIL				(R:EVERY 2 YEARS)	I	122 124		
* BRAKE FLUID		NOTE 3		I	I	144		
* BRAKE PADS WEAR		NOTE 1,2			I	147		
* BRAKELIGHT SWITCH				I	I	151		
BRAKE SYSTEM				I	I	144		
SKID PLATE, ENGINE GUARD				I	I	159		
* SUSPENSION				I	I	—		
* SPARK ARRESTER				C	C	142		
* NUTS, BOLTS, FASTENERS				I	I	—		
** WHEELS/TYRES				I	I	152		
** TIE-ROD AND JOINT BOOTS				I	I	—		
** STEERING SHAFT HOLDER BEARINGS					I	—		
** STEERING SYSTEM					I	—		

\* Should be serviced by your Honda dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Shop Manual.

\*\* In the interest of safety, we recommend these items be serviced only by your Honda dealer.