



Starting & Stopping the Engine

Starting Procedure

This vehicle has a fuel-injected engine with an automatic choke. Follow the procedure indicated below.

Any Air Temperature

- Press the start button with the throttle completely closed.

The engine will not start if the throttle is fully open (because the electronic control module cuts off the fuel supply).

The starter motor will operate when the transmission is in neutral or the clutch lever/parking brake lever is pulled in.

