

Flooded Engine

If the engine *does not* start after operating the recoil starter several times, it may have become flooded with excess fuel. To clear the engine:

1. Turn the engine stop switch OFF.
2. Move the choke lever to the fully OFF position.
3. Hold the throttle fully open and operate the recoil starter several times.
4. Turn the engine stop switch to RUN and repeat the normal starting procedure, but don't use the choke.