

# Maintenance Schedule

## Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
		↔	km	150	1000	2000	
			mi	100	600	1200	
		NOTE	HOURS	20	100	200	
*	FUEL LINE				I		—
*	THROTTLE OPERATION				I		109
	AIR CLEANER	NOTE 1			C	C	105
	SPARK PLUG				I	I	114
*	VALVE CLEARANCE			I	I	I	117
	ENGINE OIL			INITIAL=150km (100mi) 20 operating hours or 1month:R REGULAR=Every 1000km (600mi) 100 operating hours or 12 months:R			99
**	ENGINE OIL STRAINER SCREEN					C	—
**	ENGINE OIL CENTRIFUGAL FILTER					C	—
*	ENGINE IDLE SPEED			I	I	I	112

\* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Shop Manual.

\*\* In the interest of safety, we recommend these items be serviced only by your Honda dealer.