

# Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ↔ NOTE	INITIAL MAINT.		REGULAR MAINT. INTERVAL		Refer to page
			km	150	1000	2000	
			mi	100	600	1200	
			HOURS	20	100	200	
	DRIVE CHAIN	NOTE 1, NOTE 2		I, L	I, L EVERY 500 km (300 mi) or 50 operating hours		134
	DRIVE CHAIN SLIDER				I	I	136
*	BRAKE SHOE WEAR	NOTE 1			I	I	123
	BRAKE SYSTEM			I	I	I	119
	SKID PLATES				I	I	133
*	CLUTCH SYSTEM			I	I	I	111
*	SUSPENSION				I	I	—
*	SPARK ARRESTER				C	C	118
*	NUTS, BOLTS, FASTENERS			I		I	—
**	WHEELS/TYRES			I	I	I	—
**	STEERING SHAFT HOLDER BEARINGS					I	—
**	STEERING SYSTEM					I	—

- \* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Shop Manual.
- \*\* In the interest of safety, we recommend these items be serviced only by your Honda dealer.